


C4 Machine Dishwash Detergent

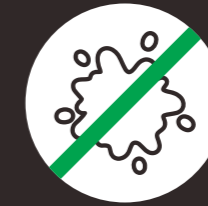

- Suitable for most dishwashing machines
- Removes & prevents the build up of stains
- Suitable on most materials including ceramics, stainless-steel, plastic & rubber

**Always Wear
Correct PPE
Check Safety
Data Sheet**

Hazardous Pictograms

1

Always wear correct PPE

2

Remove the chemical pick up tube from the empty container

3

Position the new container before removing the lid

4

Remove the product lid

5

Insert the detergent chemical pick up tube

6

Empty – Rinse – Recycle

